

INSTRUCTION SHEET

PRODUCT NAME:
VERTICAL CURVE MILAN 115 x 97.5


SIZE SPECIFICATIONS:
FACE: 115" W x 97.5" H
TOTAL SIZE: 115" W x 97.5" H



Front View



Side View



Isometric View

FRAME ASSEMBLY

STEP 1: BOTTOM SECTION

PARTS REQUIRED: 2-TC1, 2-BC4, 2-B1, 2-S2, 1-S3, 1-S4

- Attach the base B1 to part BC4 by using the locking pin
- Follow the number sequence
- Connect corner TC1 to BC4
- Connect S2 to TC1
- Connect S3 to S2
- Connect S4 to S3
- Connect S2 to S4
- Connect TC1 to S2
- Connect BC4 with Base to TC1

STEP 2:


PARTS REQUIRED: 2-C1, 2-C2,

- Take Bottom Section from STEP 1
- Follow the number sequence
- Connect C1 to BC4
- Connect C2 to C1
- Repeat to complete other side

STEP 3:




PARTS REQUIRED: 2-TC1, 2-S2, 1-S3, 1-S4, 2-C1

- Follow the number sequence
- Connect C1 to C2
- Connect TC1 to C2
- Connect S2 to TC1
- Connect S3 to S2
- Connect S4 to S3
- Connect S2 to S4
- Connect TC1 to S2
- Connect C1 to TC1
- Connect C1 to C2
- Attach the completed upper section to the lower section to complete the frame

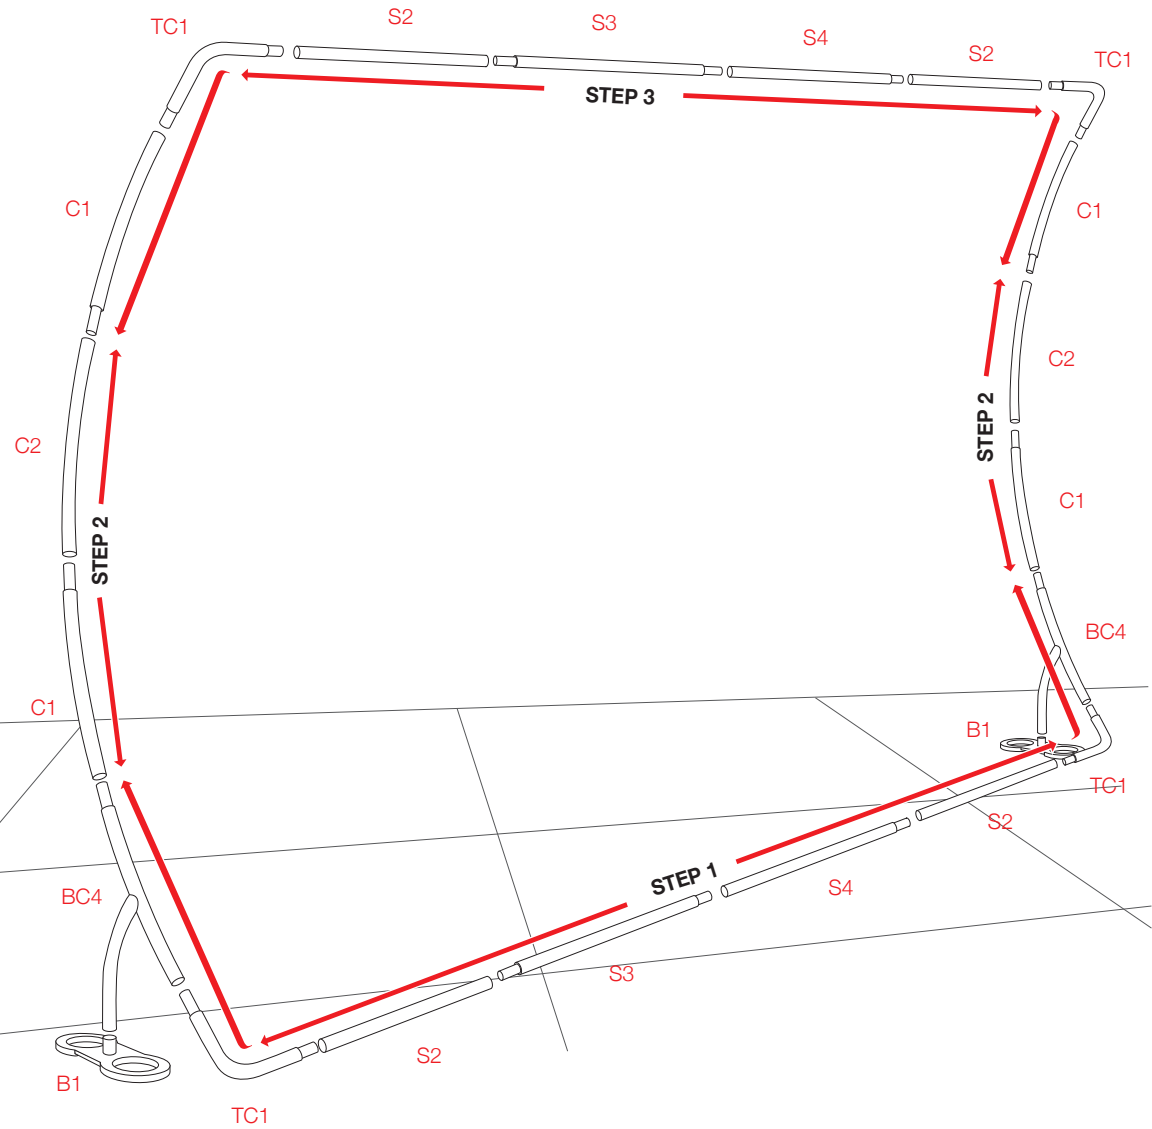

FABRIC INSTALLATION

- Make sure that floor is clean. If possible use a drop cloth. Lay frame on the floor
- Locate the opening on the fabric
- Make sure that zipper is open
- Drape fabric like a pillow cover to the frame starting at the top
- Pull the fabric part way down and stand frame up
- Pull fabric completely down and close zipper

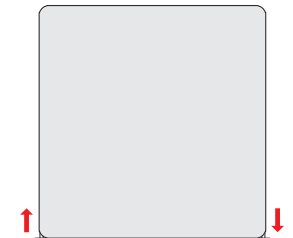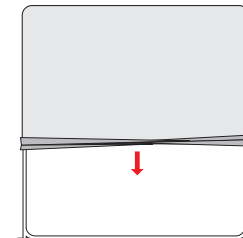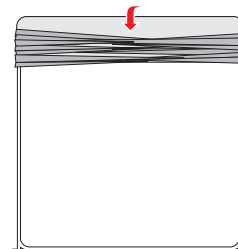

This document contains propriety information.
No portion may be disclosed to others, reproduced
or used in any way without our written authorization.
© Copyright 2009

ZIP